



A162W 100/120CM

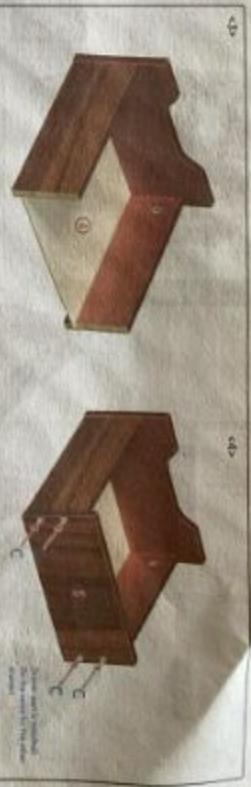

Step 2 Cabinet part installation

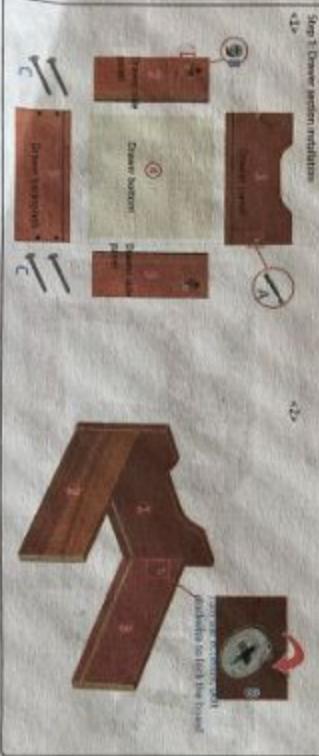

-x2-



-x2-



-x2-



-x2-



-x2-



-x2-



-x2- Shelves could enter the drawer

Instruction 1: Open the side drawer and insert the shelves.

Instruction 2: Close the side drawer after the shelves are all inserted into the side drawer.

Side drawer



Step 3 - Backboard panel installation



-x2-




-x2- After the installation is complete, tighten the whole



-x2-



-x2-

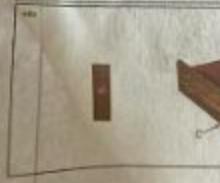

Finally the picture

